




乾羅科技股份有限公司

Plug Master Industrial Co., Ltd.

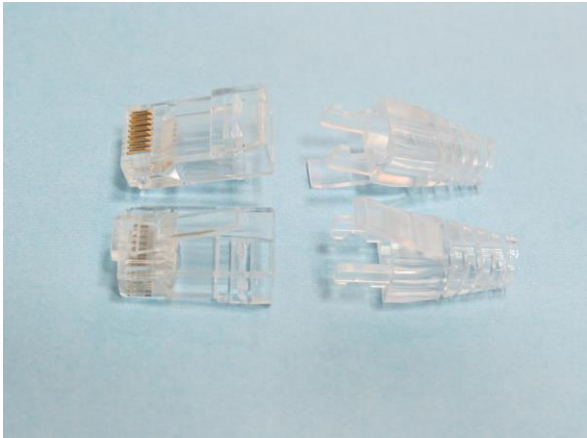


1. EZ PLUG P8-071-2 + BOOT SR-032M



2. EZ-TOOL # PM-3008R or # PM-3008RC




3. Insert BOOT into the cable .

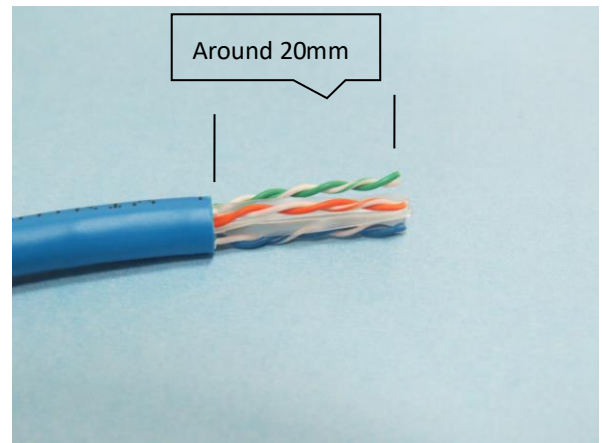

4. Strip and remove around 20mm of Jacket.



5. Trim cable cross member and separate four pairs.

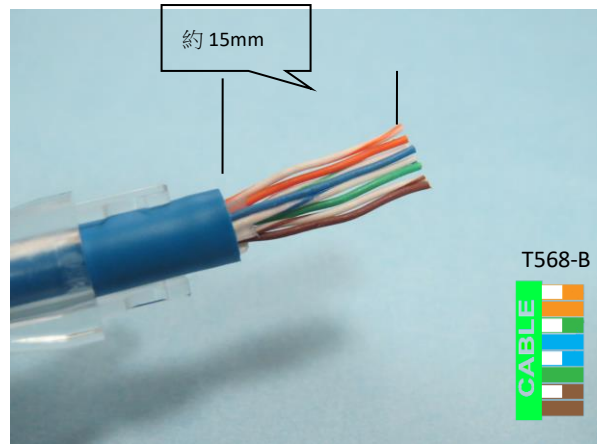


6. Arrange the wires according to TIA/EIA 568A & 568B standards. Reserve 15mm of the wires is most suitable length for assembly .




乾羅科技股份有限公司


*Plug Master Industrial Co., Ltd.*

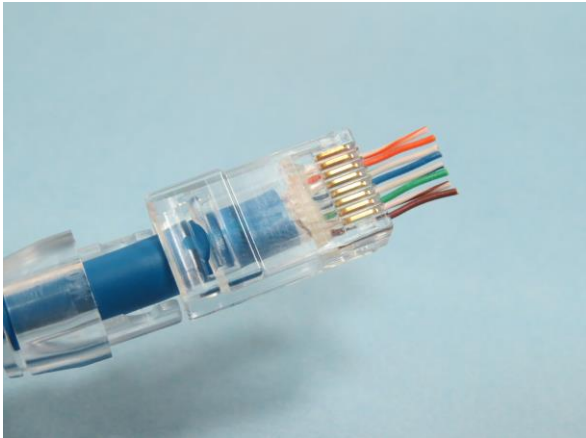


7. Push cable in the end of plug as inside as possible.

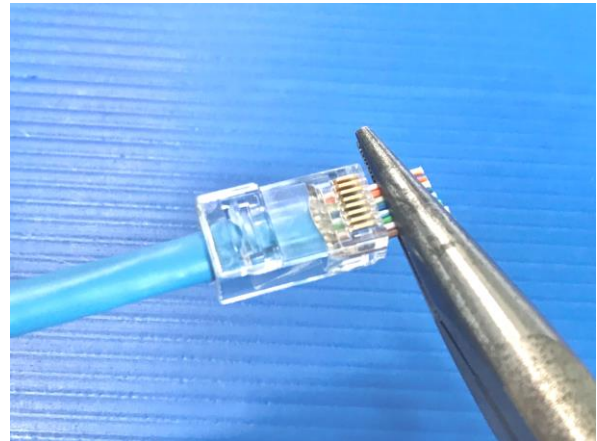

8. Use plier to pull wires to make them straight.

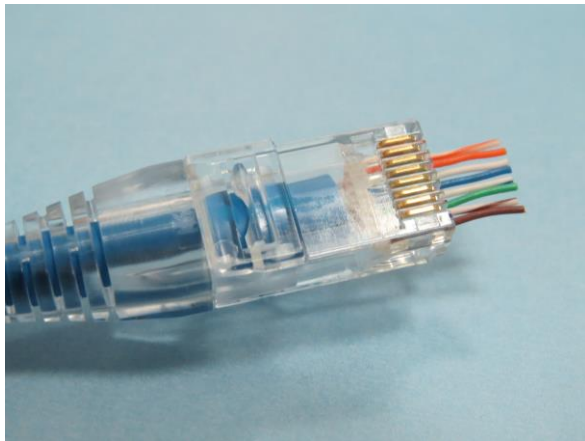

9. Push Boot into the plug as inside as possible.

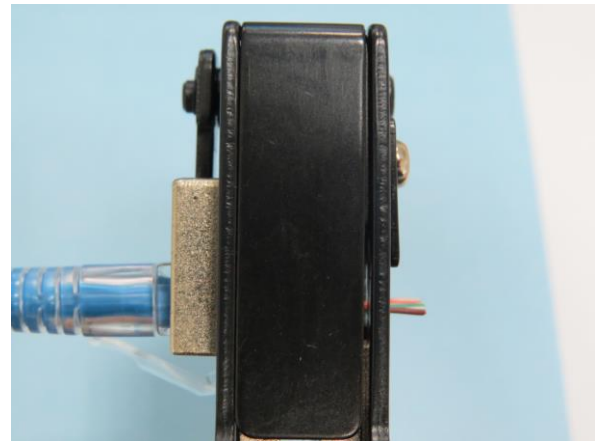

10. Put the assembly into feed through tool and crimp.



11. Assembly finished



12. Assembly finished