





乾羅科技股份有限公司
Plug Master Industrial Co.,Ltd.




1. P8-020-19 Pass through plug Cat.6A STP

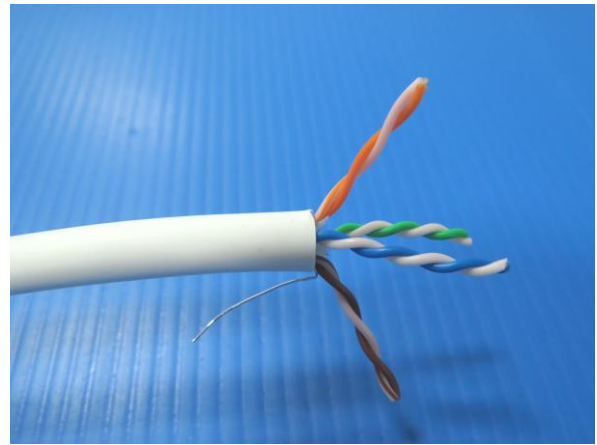


4. Trim cable cross member and band drain wire.

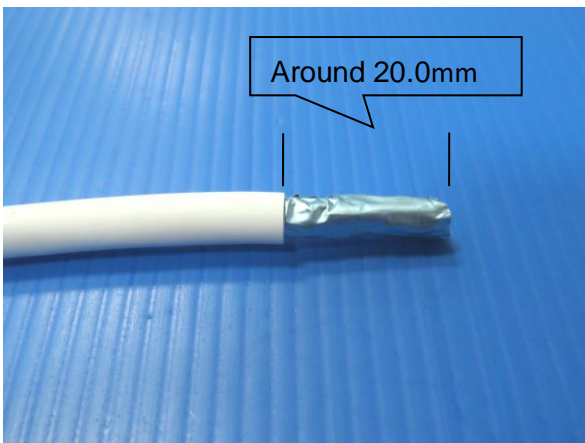

2. Strip and remove 20mm of jacket.

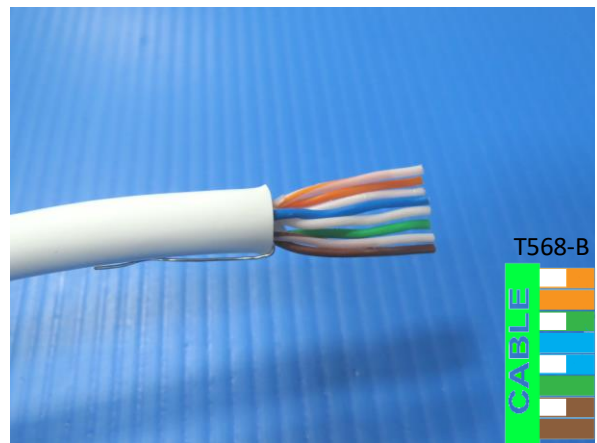

5. Arrange the wires according to right picture.

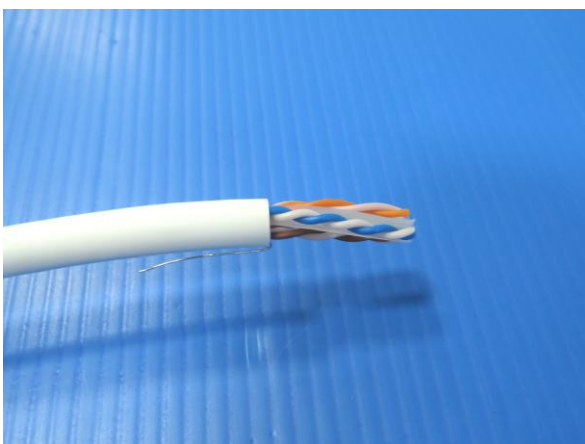


3. Cut off the tinfoil



6. Push assembly into the end of plug body.




乾羅科技股份有限公司
Plug Master Industrial Co.,Ltd.

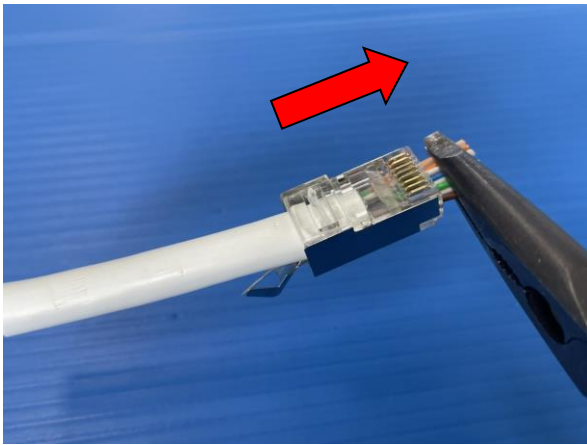


7. Use plier to pull wires to make them straight.



10. After crimping.

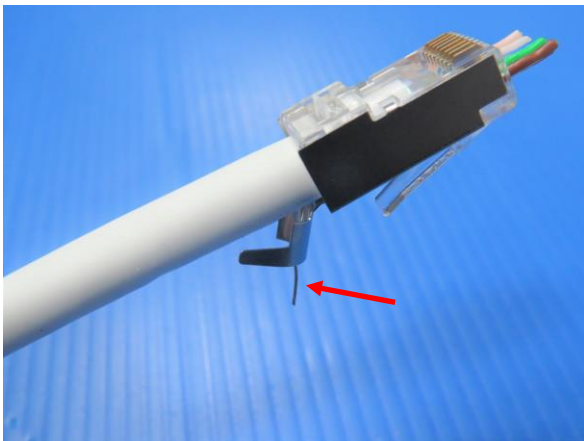


8. Be noted the position of drain wire
(inside Cable clip)

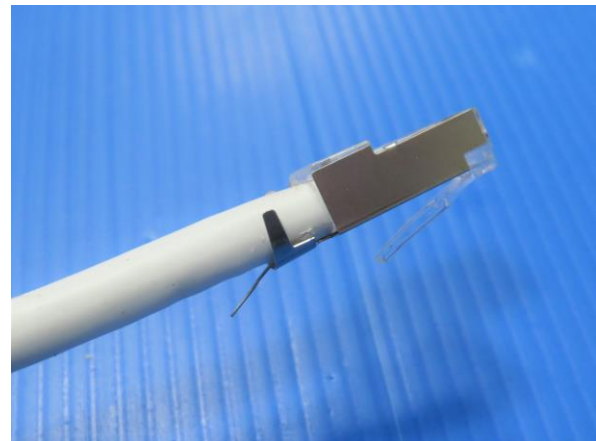

11. Make the cable clip close to cable jacket.



9. Put the assembly into feed through tool
PM-3008R

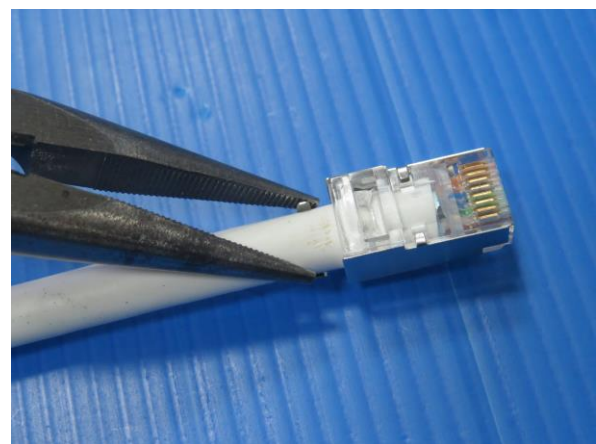

12. Use a pliers to tighten the cable clip.



乾羅科技股份有限公司
Plug Master Industrial Co.,Ltd.



13. trim the remaining drain wire.



14. Assembly Finish



15. Assembly Finish