




# 乾羅科技股份有限公司 Plug Master Industrial Co., Ltd.

Taipei Office : 6F.No.52,Lane 1 ,Sec 2,Guo Dao Rd.Lu-Chou Dist, New Taipei City 24760,Taiwan  
TEL:886-2-8983-2915, 886-2-8981-4936 FAX:886-2980-1297  
E-mail: [pmcplug@plugmaster.com.tw](mailto:pmcplug@plugmaster.com.tw) <http://www.plugmaster.com.tw>

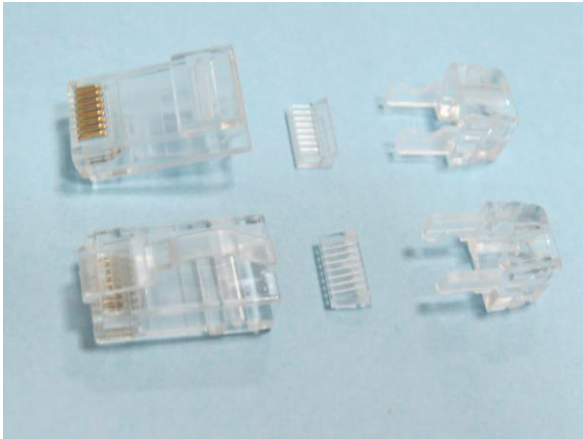


1. P/N No.: Plug P8-018-9 + Boot SR-033




2. EZ-TOOL ( PM-3008R/RC )




3. Push boot into cable.

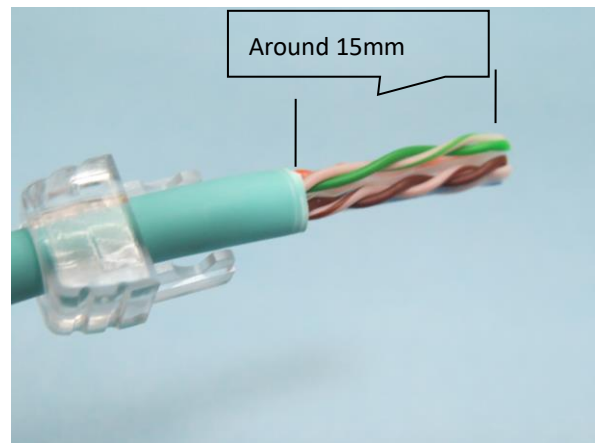

4. The Cable PVC 15mm by stripping.

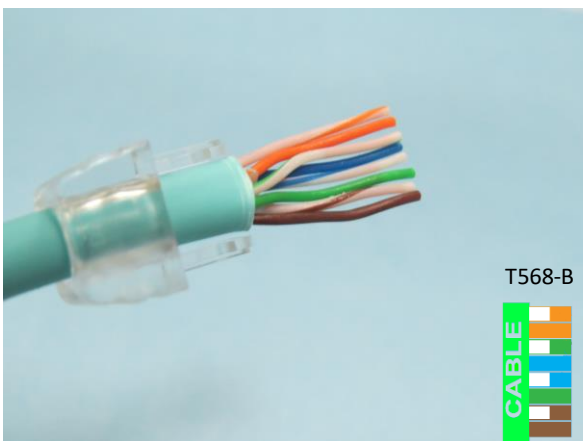

5. Trim cable cross member and  
Arrange the wires according to T568A or B.

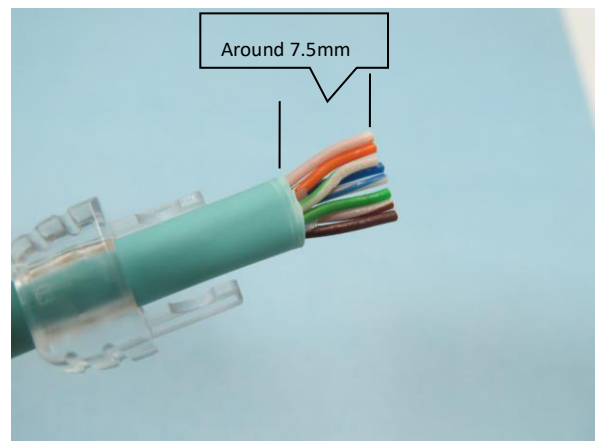

6. Reserve 7.5mm wires and cut rest wires.




# 乾羅科技股份有限公司 Plug Master Industrial Co., Ltd.


Taipei Office : 6F, No. 52, Lane 1, Sec 2, Guo Dao Rd. Lu-Chou Dist, New Taipei City 24760, Taiwan  
TEL: 886-2-8983-2915, 886-2-8981-4936 FAX: 886-2980-1297  
E-mail: [pmcplug@plugmaster.com.tw](mailto:pmcplug@plugmaster.com.tw) <http://www.plugmaster.com.tw>




7. Insert the boot into plug body .

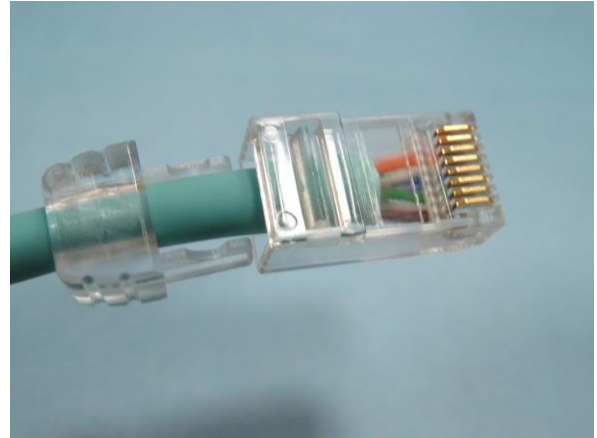


8. Push the assembly into plug body.  
(Push inward as much as possible)

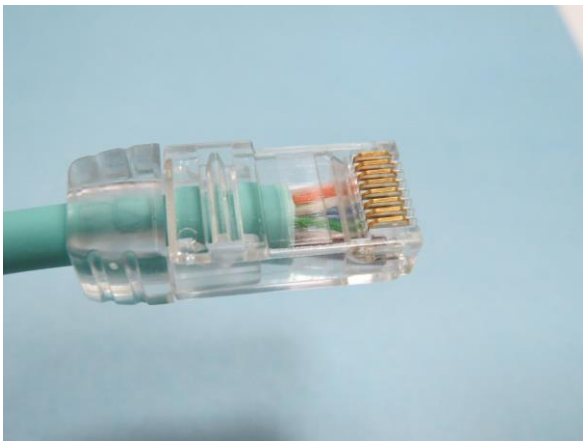


9. Push boot into plug body.  
(Push inward as much as possible)

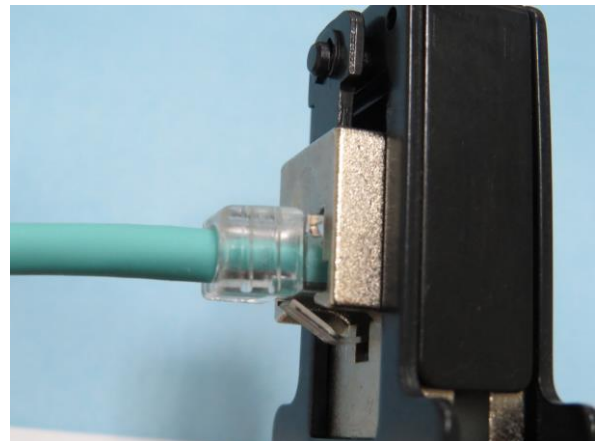

10. Put the assembly into Feed Through Tool  
PM-3008R, then Crimp.

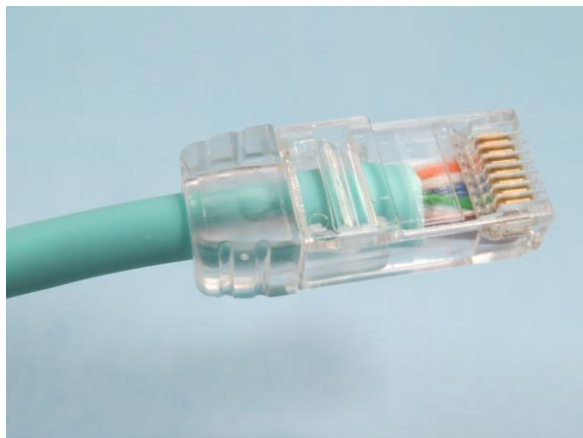

11. Assembly finished.

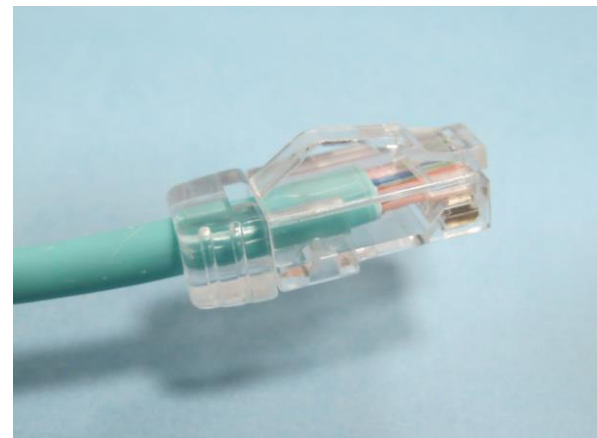

12. Assembly finished.