





乾羅科技股份有限公司 Plug Master Industrial Co., Ltd.



1. Part No. : P8-018 + SR-032M

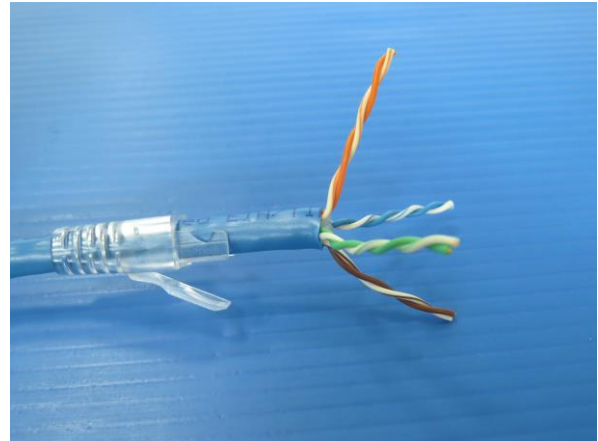


4. Trim cable cross member and separate four pairs.

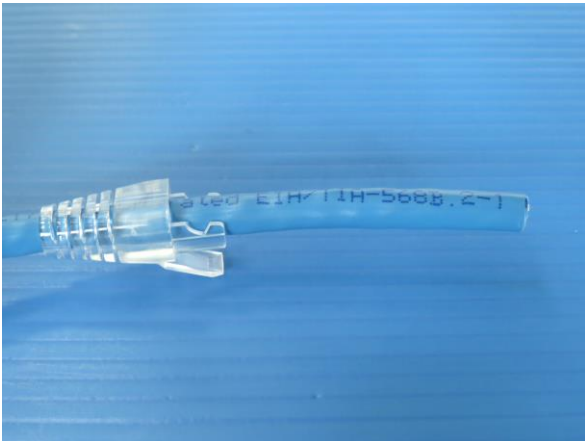


2. Push SR-032 into cable.



5. Untwist the wires. Arrange the wires according to TIA/EIA 568A & 568B standards.

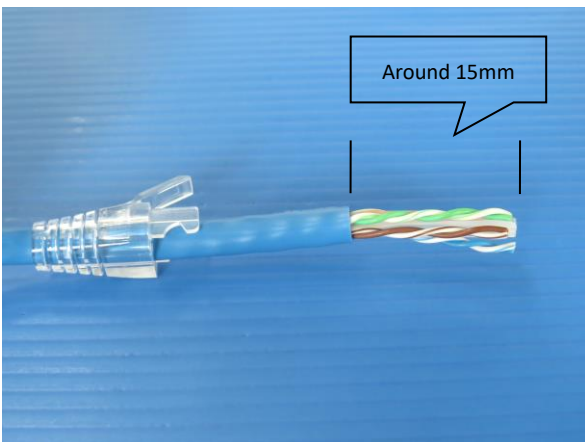


3. Carefully strip the jacketing from the cable to expose 15mm of the insulated wire conductors.

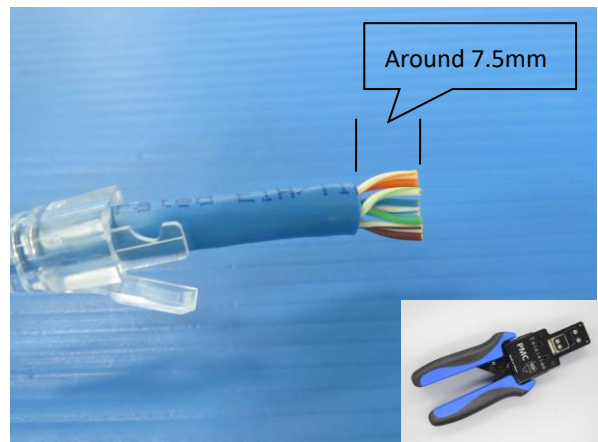

6. Cut the wire and leave around 7.0mm±0.5 (Recommended tool : PM-3008R)



乾羅科技股份有限公司
Plug Master Industrial Co., Ltd.

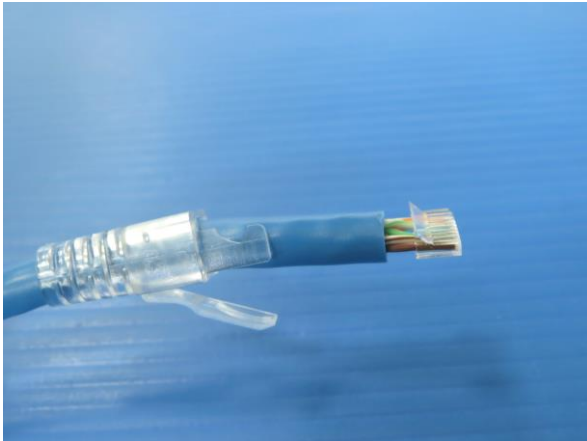

7. Insert wires into loading bar.



10. Insert the plug into crimp tool. Firmly squeeze the handles to set the contacts and secure the cable.



8. Insert prepared cable into plug.



11. Assembly finished.



9. Push the boot SR-032M into plug.



12. Assembly finished.