




乾羅科技股份有限公司 Plug Master Industrial Co., Ltd.

Taipei Office : 6F.No.52,Lane 1 ,Sec 2,Guo Dao Rd.Lu-Chou Dist, New Taipei City 24760,Taiwan
TEL:886-2-8983-2915, 886-2-8981-4936 FAX:886-2980-1297
E-mail: pmcplug@plugmaster.com.tw <http://www.plugmaster.com.tw>



1. P/N No.: Plug P8-005-27 + Boot SR-032M.

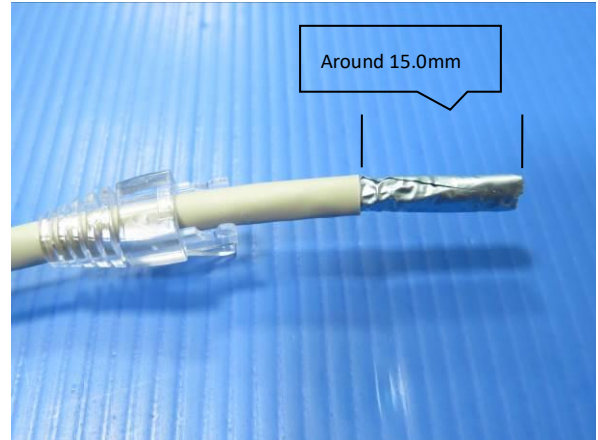

4. The Cable PVC 15mm by stripping.




2. EZ-TOOL (PM-3008R/RC) .



5. Cut off the tinfoil , Trim cable cross member and put drain wire down to avoid interruption.



3. Push boot into cable.

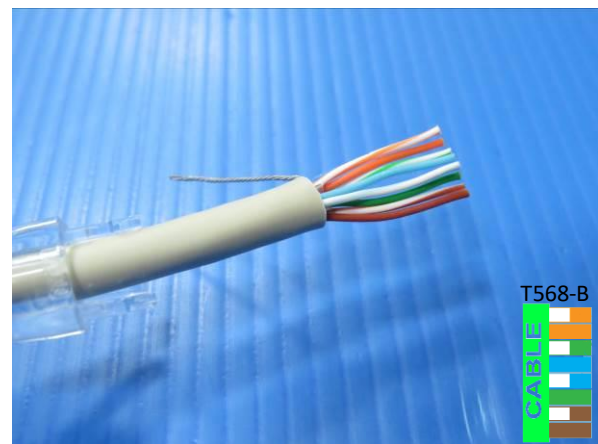


6. Arrange the wires according to T568A or B.



乾羅科技股份有限公司 Plug Master Industrial Co., Ltd.


Taipei Office : 6F.No.52,Lane 1 ,Sec 2,Guo Dao Rd.Lu-Chou Dist, New Taipei City 24760,Taiwan
TEL:886-2-8983-2915, 886-2-8981-4936 FAX:886-2980-1297
E-mail: pmcplug@plugmaster.com.tw <http://www.plugmaster.com.tw>

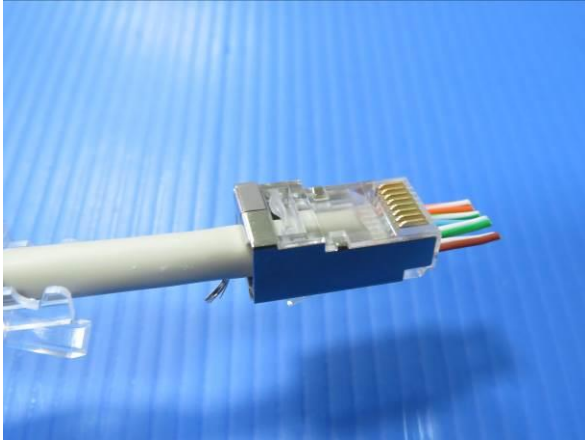


7. Push assembly into the end of plug body.




10. Push boot into plug body.

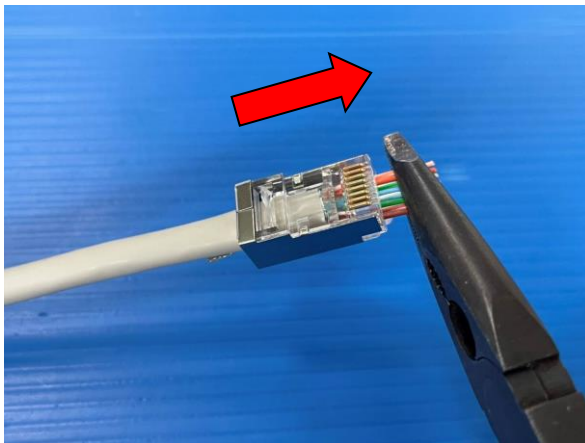


8. Use plier to pull wires to make them straight.

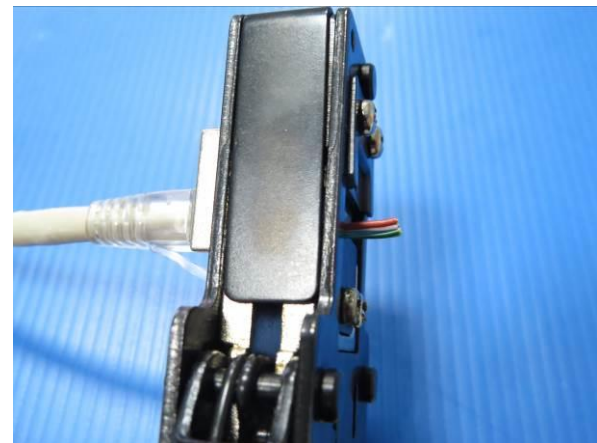

11. Put assembly into EZ-TOOL (PM-3008R/RC).

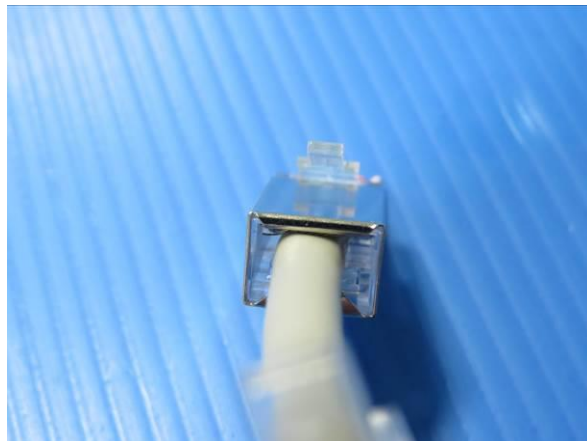

9. Plug the drain wire into the PLUG.
and close it to the shell.

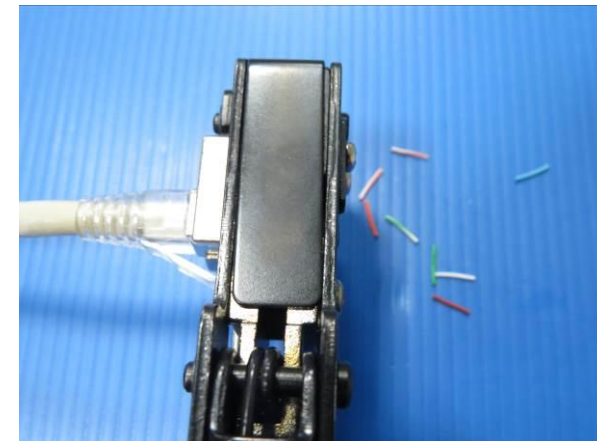

12. Crimp Plug.



乾羅科技股份有限公司 Plug Master Industrial Co., Ltd.

Taipei Office : 6F, No. 52, Lane 1, Sec 2, Guo Dao Rd. Lu-Chou Dist, New Taipei City 24760, Taiwan
TEL: 886-2-8983-2915, 886-2-8981-4936 FAX: 886-2980-1297
E-mail: pmcplug@plugmaster.com.tw <http://www.plugmaster.com.tw>



13. Assembling process completed.

NOTE:

Please note to insert the ground wire into housing to contact with the copper shell

