





乾羅科技股份有限公司
Plug Master Industrial Co., Ltd.




1. Part No. P8-030 Plug with load bar

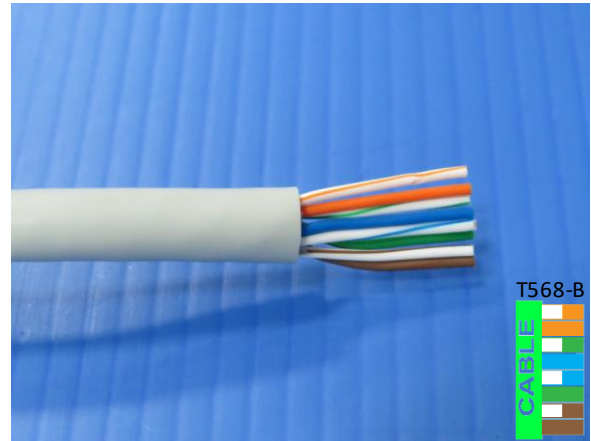


4. Arrange the wires according to TIA/EIA 568A & 568B standards.

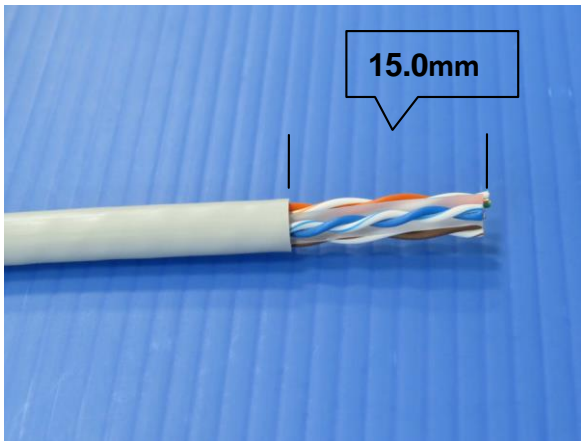


2. Strip and remove 15mm of jacket.

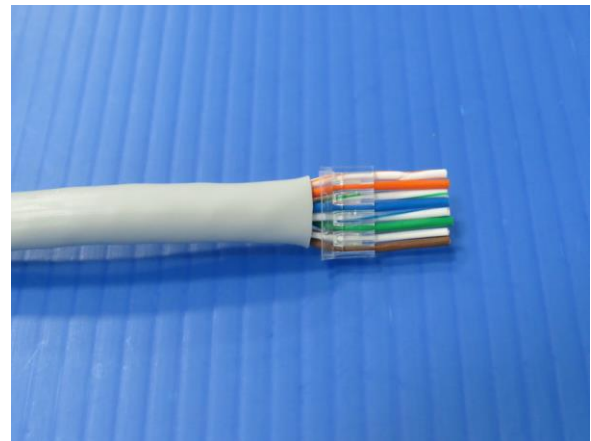

5. Slide into load bar

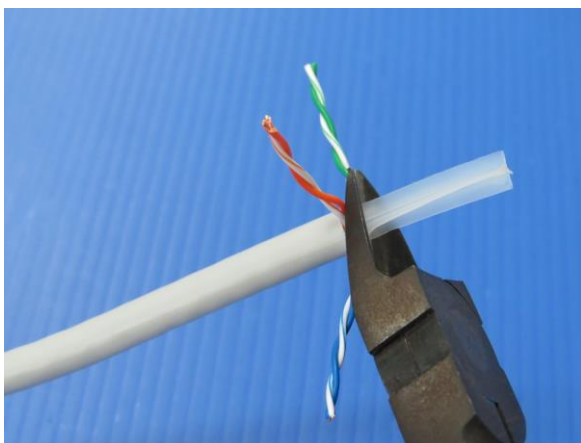

3. Trim cable cross member and separate four pairs.

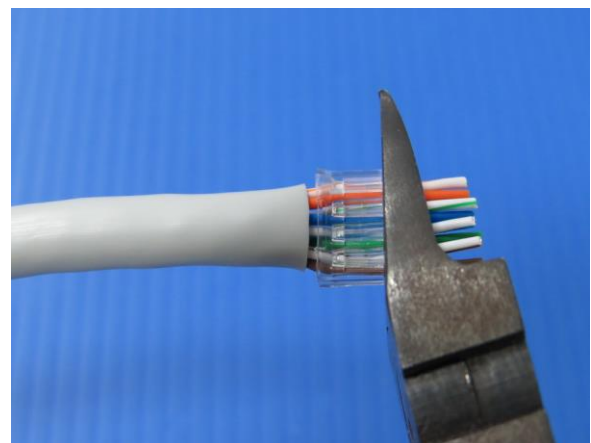


6. Trim the front end of the wires.



乾羅科技股份有限公司
Plug Master Industrial Co., Ltd.




7. After Trimming.

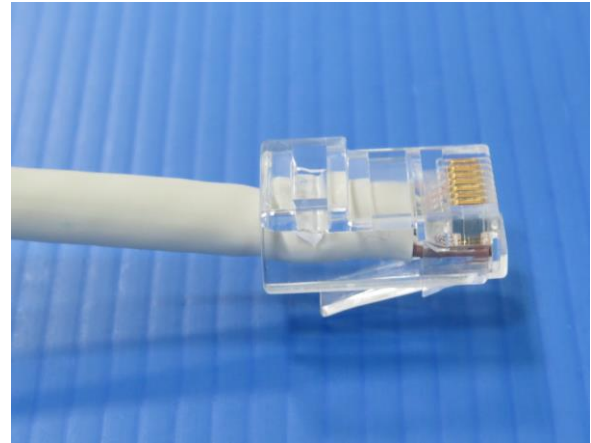

9. Assembling process completed.



8. Slide the assembly into PLUG body.
(Push inside as you can)

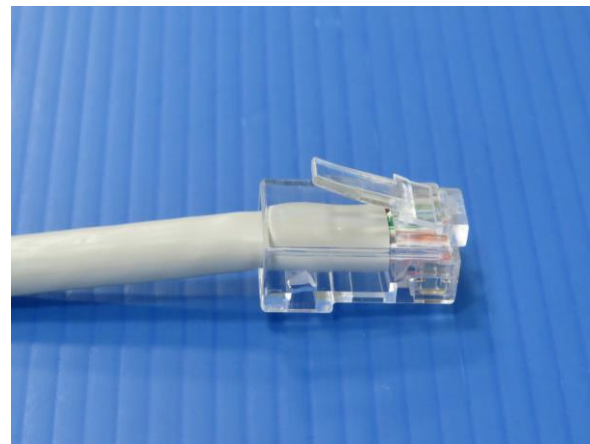

10. Assembling process completed.



9. To Crimp.