




乾羅科技股份有限公司  
*Plug Master Industrial Co.,Ltd.*




1. P8-039-9 Cat.6 UTP 3 pieces plug (PATENTED)

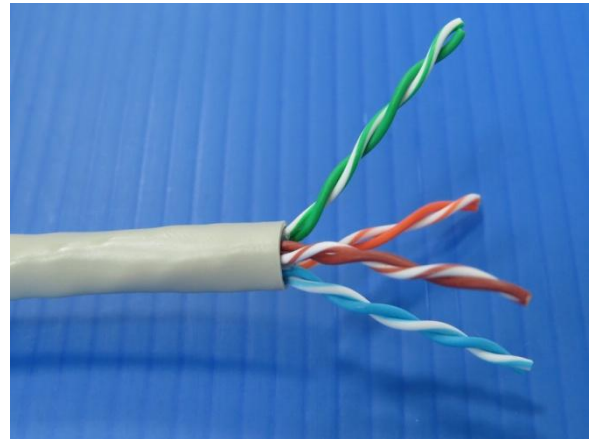


4. Separate the four pairs.




2. Strip and remove 20mm of jacket.

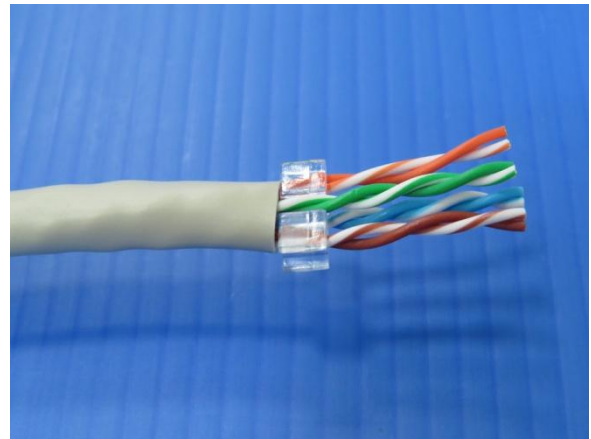

5. Slide sled over pairs .  
Orange and Brown pairs on left and right side.  
Green and Blue pairs on up and down side.

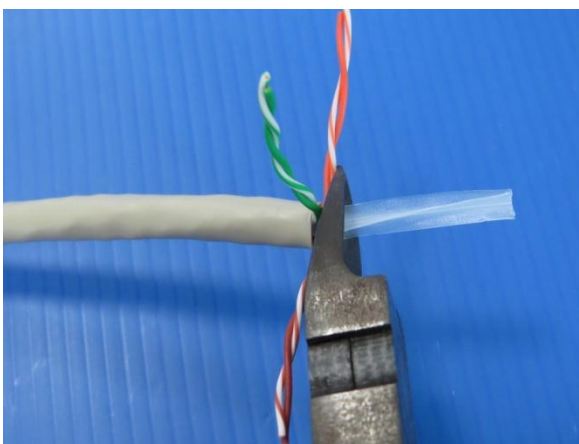


3. Trim cable cross member.

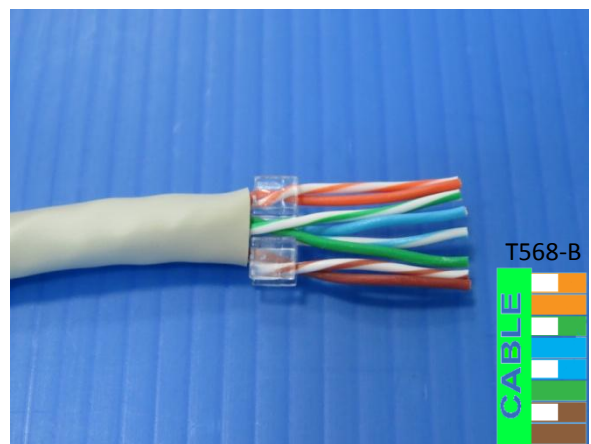


6. Untwist and order pairs .  
Arrange the wires according to TIA/EIA 568A & 568B standards.




乾羅科技股份有限公司  
*Plug Master Industrial Co., Ltd.*

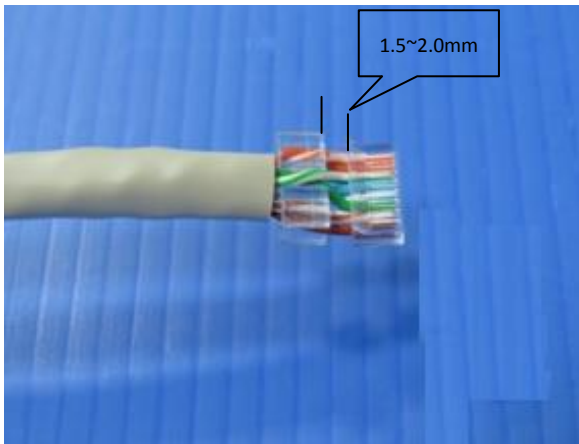


7. Slide into liner and Trim excess wires.

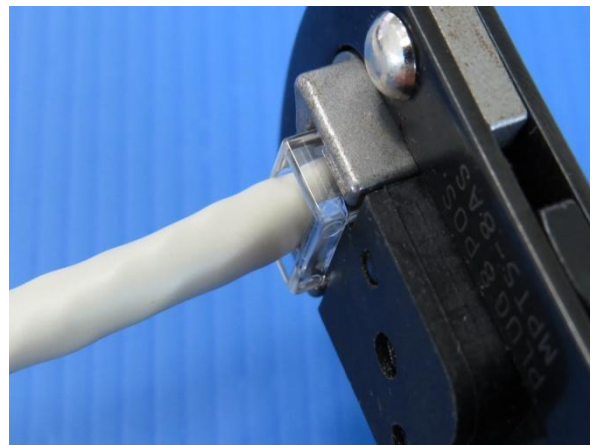

9. Crimp

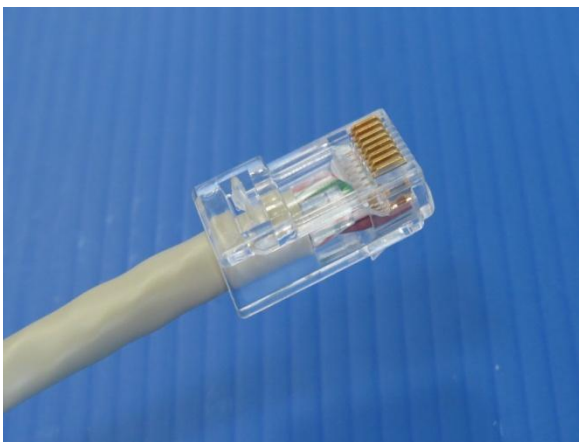

8. Slide assembly into plug body.

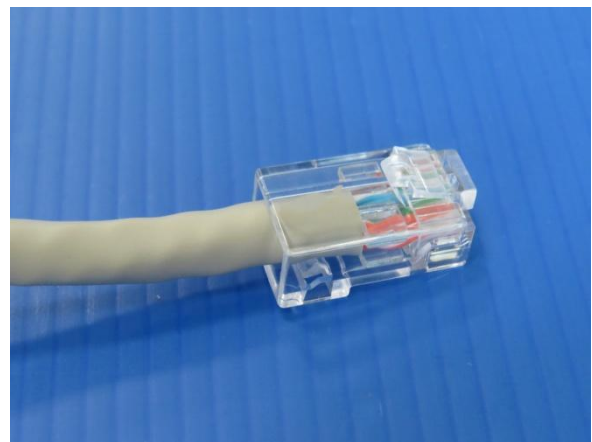

10. Finished.



乾羅科技股份有限公司  
*Plug Master Industrial Co.,Ltd.*

**1. P8-039-9 Cat.6 UTP Plug + KEY**



**2. Three colors available : Red/White/Blue**




**3. Plug is easily connected to an available outlet no need for a key or tool.**





乾羅科技股份有限公司  
*Plug Master Industrial Co.,Ltd.*

**4. Insert the key into the outlet from the top (latch side) to unlock the plug.**

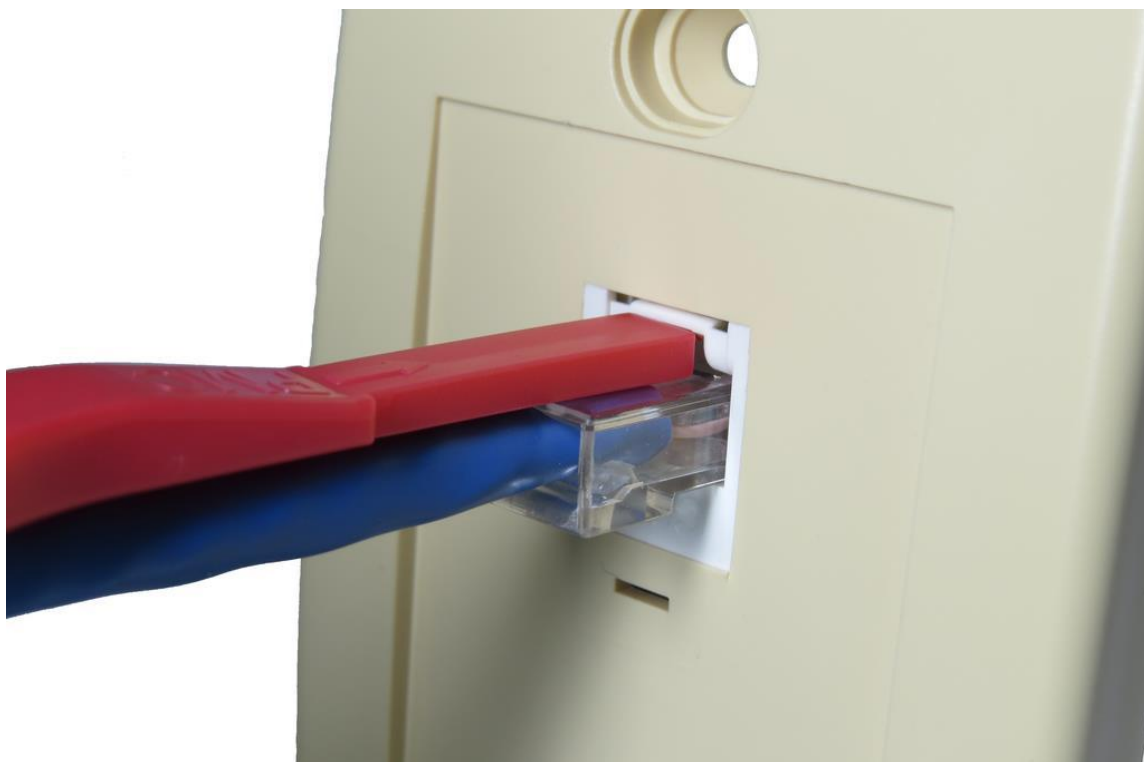



乾羅科技股份有限公司  
*Plug Master Industrial Co.,Ltd.*

**5. Pull back the patch cord with key to remove it from the outlet.**

