




Plug Master Industrial Co., Ltd

PMC Part No. P8-069 Series

8P8C-F 2 Layers Shielded with insert


Assembling Installation

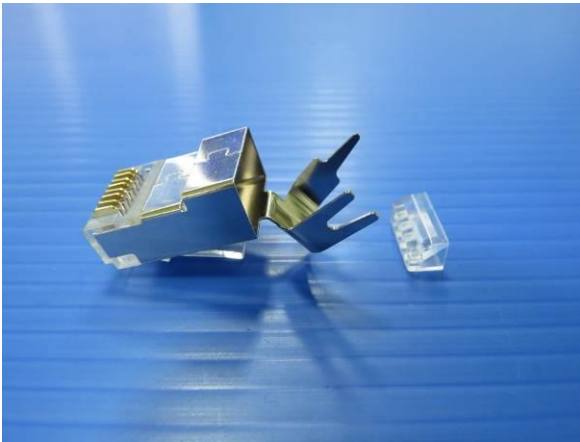

1. P8-069 series 8P8C-F with insert.



2. The Cable PVC 20mm by stripping.

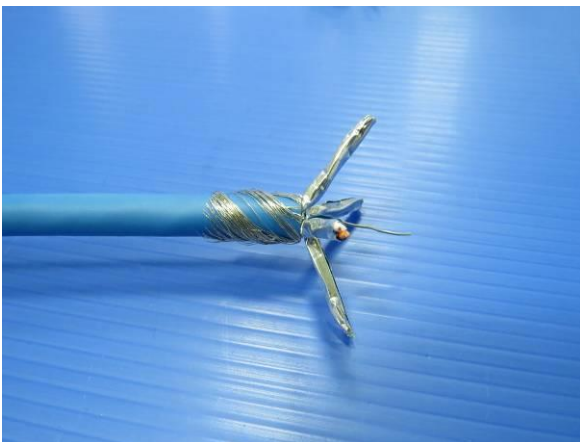


3. Spread apart the four pairs.



4. Cut off the tinfoil and twist drain wire for welding.



5. Untwist and order pairs.

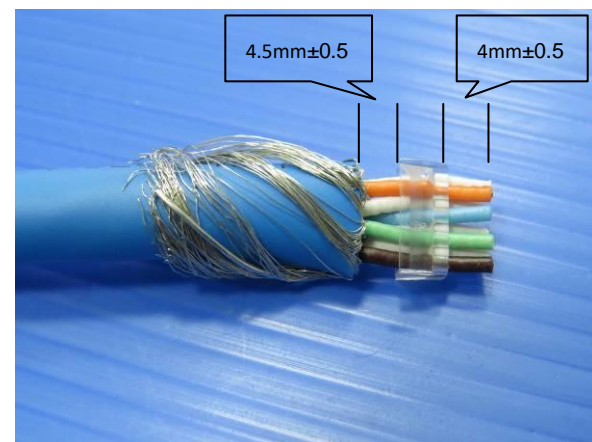

6. Slide into liner and trim.




Plug Master Industrial Co., Ltd


PMC Part No. P8-069 Series

8P8C-F 2 Layers Shielded with insert

Assembling Installation

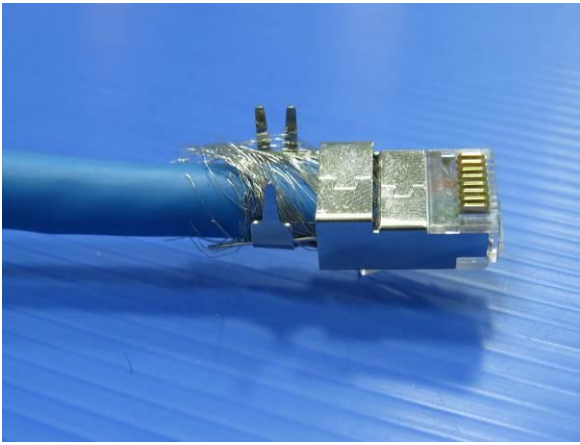


7. Slide assembly into plug body.

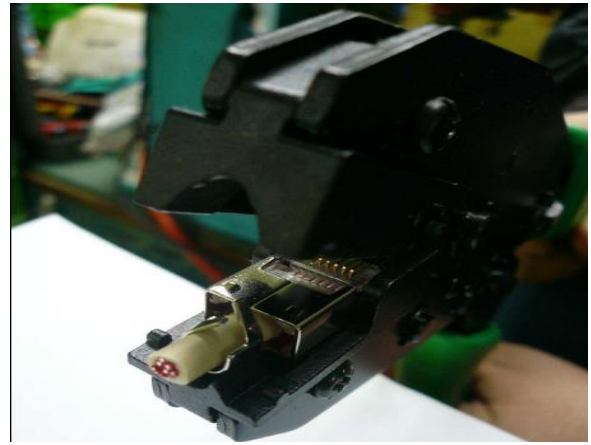


8. Crimp.



9. Crimp.

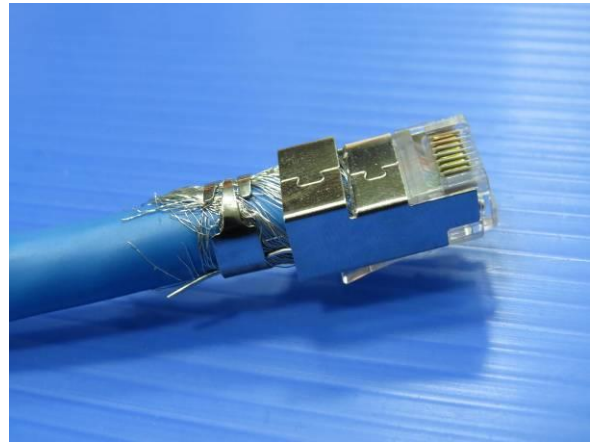

10. After crimping.

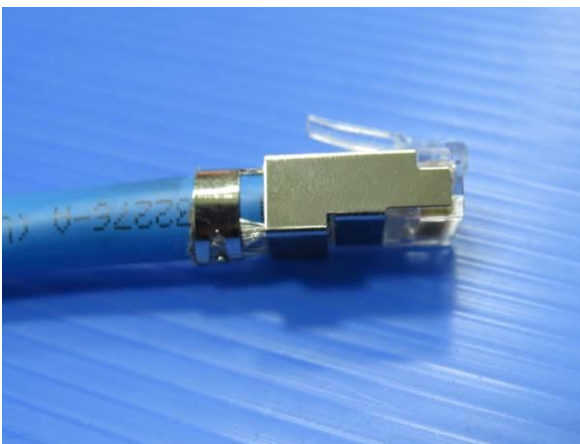

11. Cut the rest drain wire.



12. Assembling process completed.



Plug Master Industrial Co., Ltd

PMC Part No. P8-069 Series
8P8C-F 2 Layers Shielded with insert
Assembling Installation



13. Crimping tool for P8-069 Series.