





乾羅科技股份有限公司


*Plug Master Industrial Co.,Ltd.*

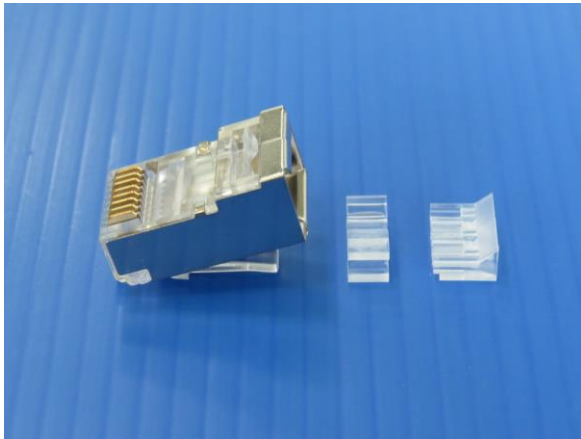


1. P/N NO. P8-064 8P8C-F-RV with divider and insert.

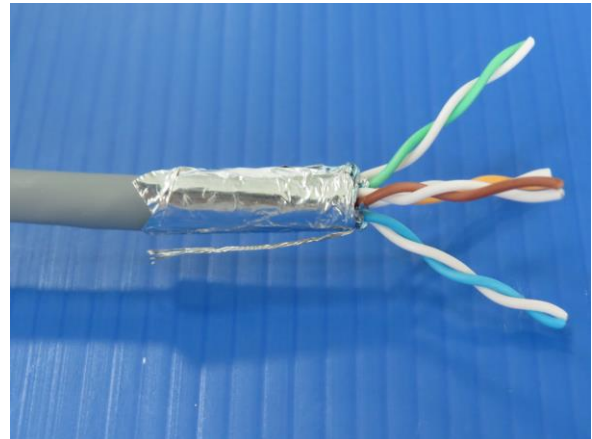


4. Spread apart the four pairs and twist drain wire downward.

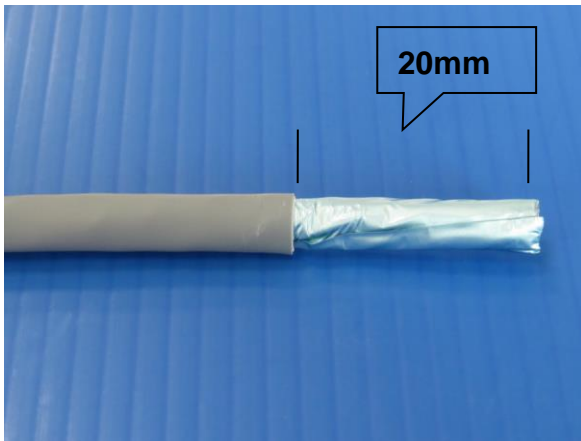


2. The Cable PVC 20mm by stripping.

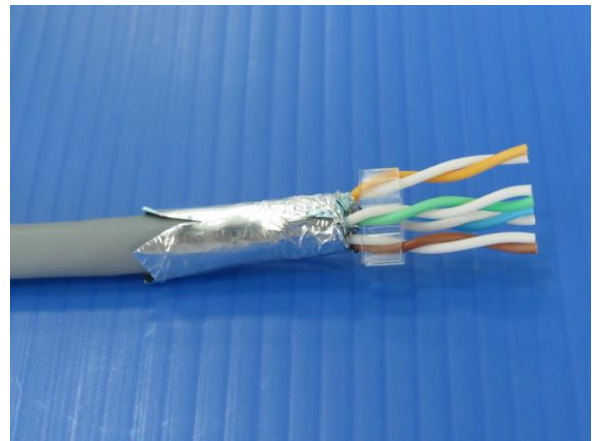

5. Slide divider into four pairs then untwist and order pairs.

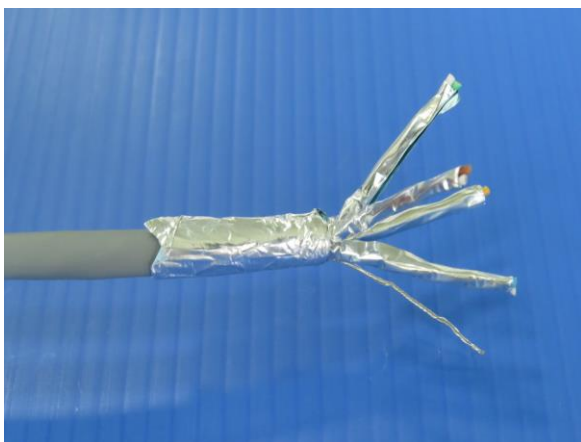

3. Strip tin foil.

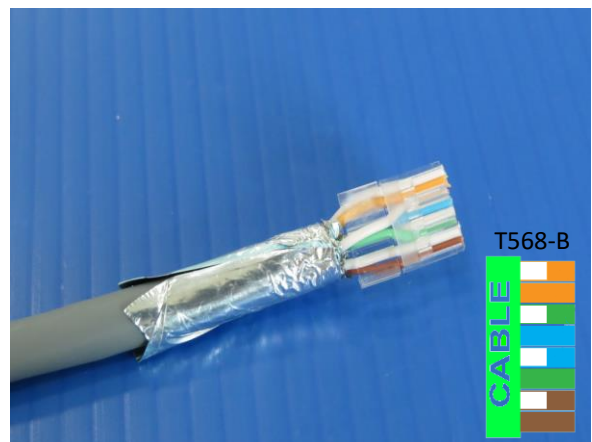

6. Slide insert into wires and trim the rest wires.





乾羅科技股份有限公司


*Plug Master Industrial Co.,Ltd.*



7. Slide assembly into plug body.




10. Cut the rest tin foil and drain wire.

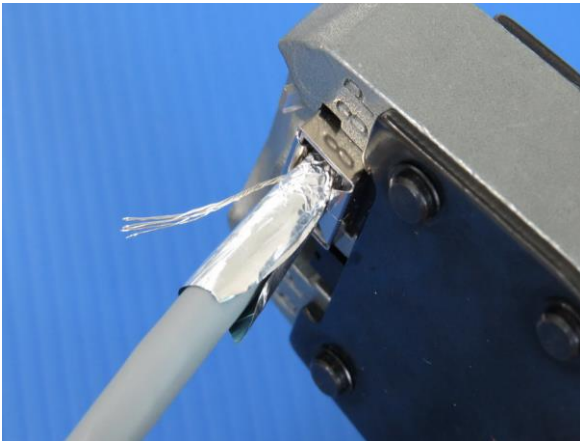

8. Crimp.



11. Assembling process completed.

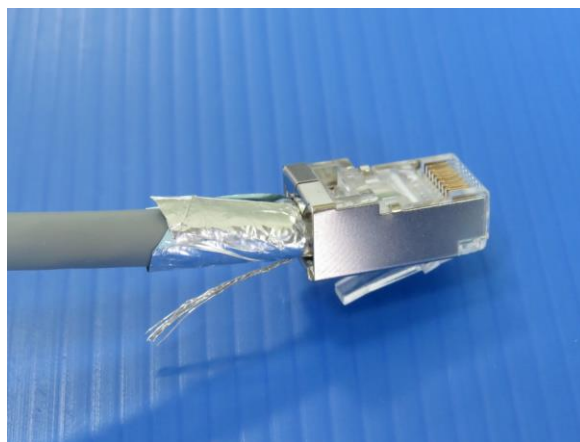

9. After Crimping.