



乾 羅 科 技 股 份 有 限 公 司

Plug Master Industrial Co., Ltd.


Taipei Office : 6F, No. 52, Lane 1, Sec 2, Guo Dao Rd. Lu-Chou Dist, New Taipei City 24760, Taiwan

TEL: 886-2-8983-2915, 886-2-8981-4936 FAX: 886-2980-1297


E-mail: [pmcplug@plugmaster.com.tw](mailto:pmcplug@plugmaster.com.tw) <http://www.plugmaster.com.tw>




1. P/N No.: P8-042-2 8P8C-F-V 3 pieces

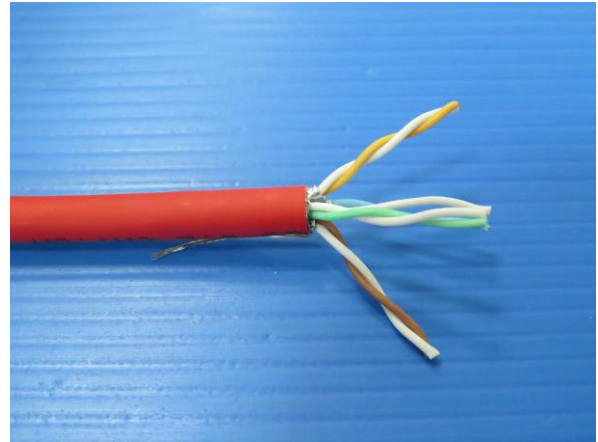

4. let the drain wire down to avoid interference

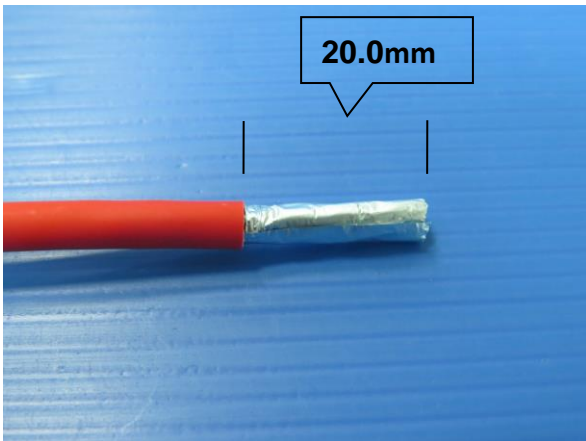


2. The Cable PVC 20mm by stripping.

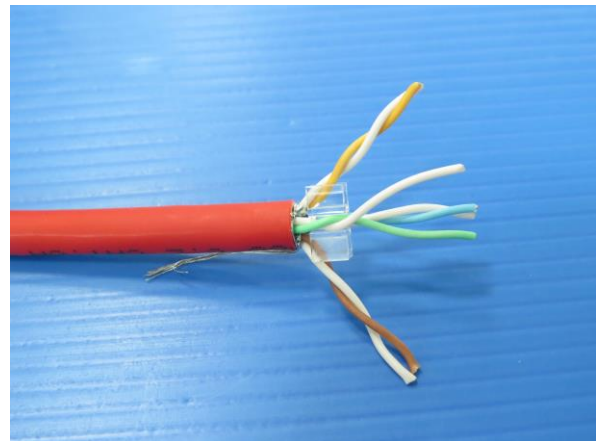


5. Slide into divider

Left/Right Side: Orange pair / Brown pair

Upper/Lower Side: Blue pair / Green pair

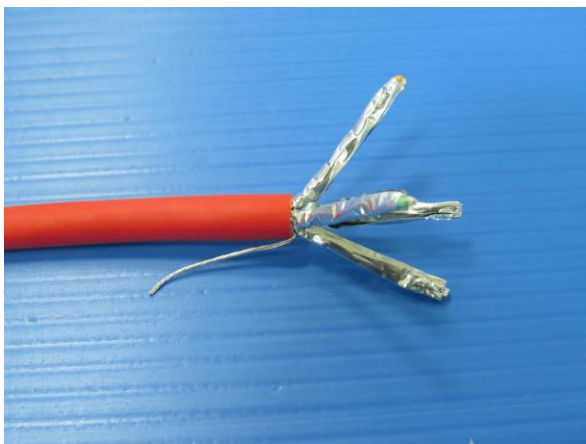

3. Peel off tin foil of outside and 4 pairs

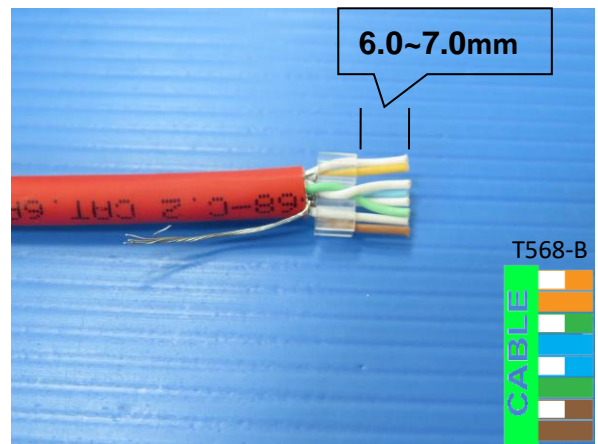

6. Spread apart the wires. Arrange the wires according to TIA/EIA 568A & 568B standards. Reserve 6.0-7.0mm and cut the rest wires.




乾 羅 科 技 股 份 有 限 公 司

**Plug Master Industrial Co., Ltd.**

Taipei Office : 6F, No. 52, Lane 1, Sec 2, Guo Dao Rd. Lu-Chou Dist, New Taipei City 24760, Taiwan

TEL: 886-2-8983-2915, 886-2-8981-4936 FAX: 886-2980-1297


E-mail: [pmcplug@plugmaster.com.tw](mailto:pmcplug@plugmaster.com.tw) <http://www.plugmaster.com.tw>

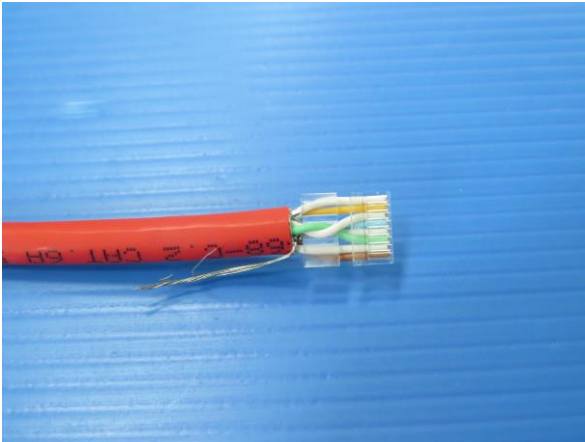


7. Slide the insert into the wires.




10. Bend the drain wire back and push into the shell of the plug

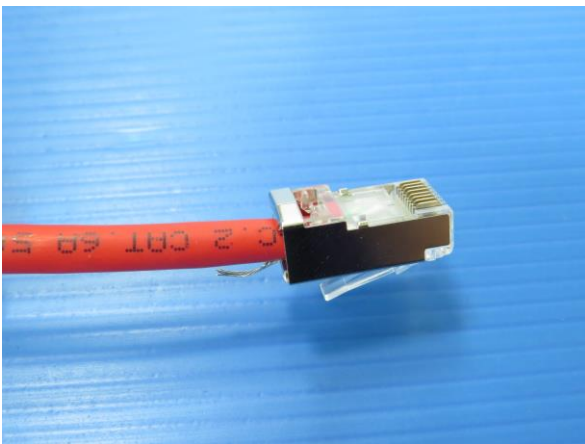


8. Slide assembly into plug body.

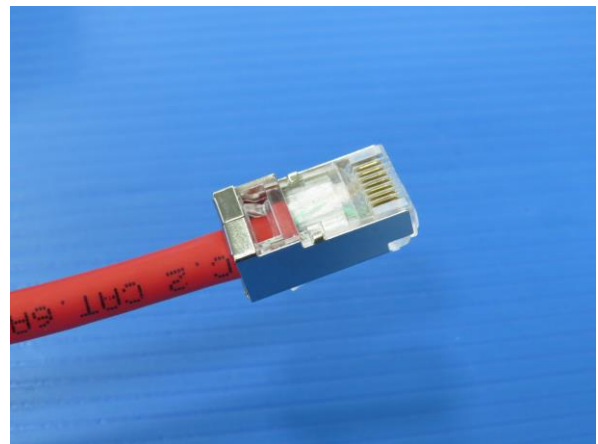

11. Assembly finished.

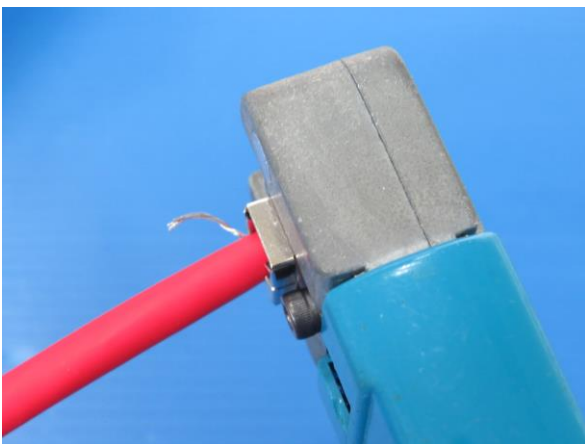

9. Crimp.

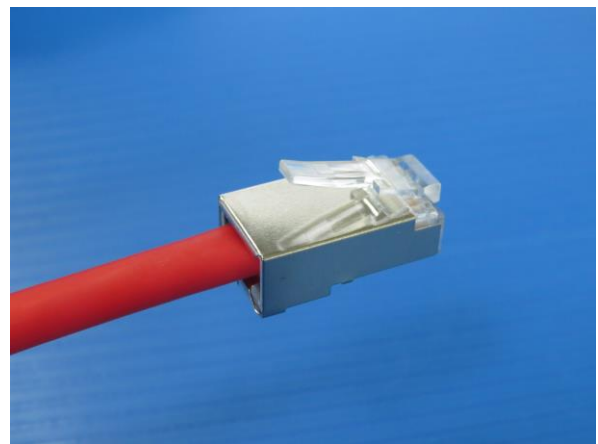

12. Assembly finished.