




乾羅科技股份有限公司


Plug Master Industrial Co.,Ltd.




1. P8-069-15 Fast Plug C6A with load bar

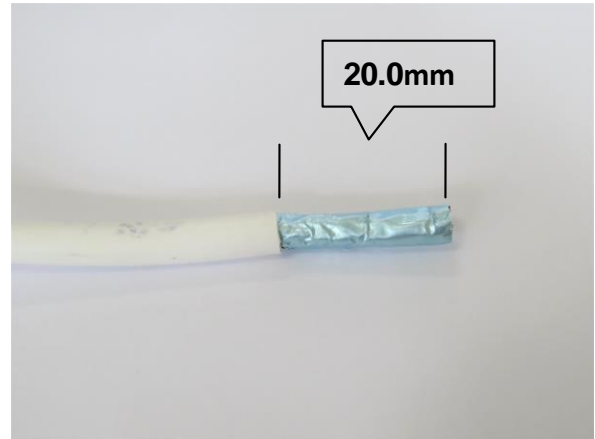


2. Strip the cable PVC jacket 20mm.

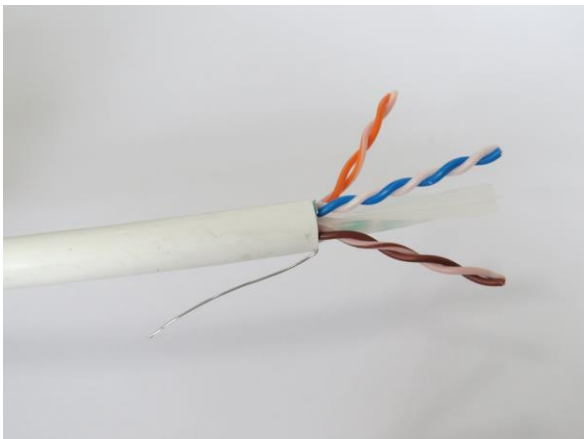


3. Spread apart four cross pairs and bend drain wire.

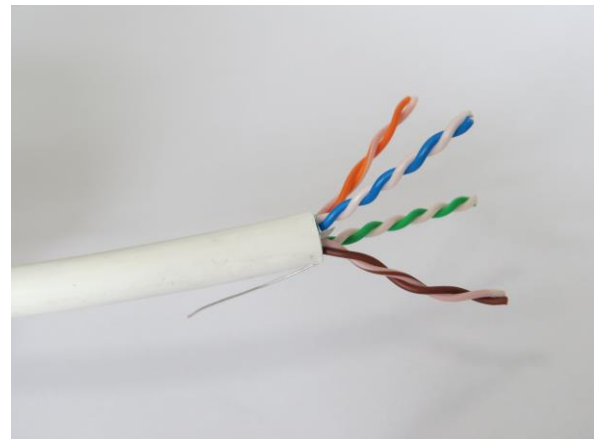

4. Trim the divider of the cable.

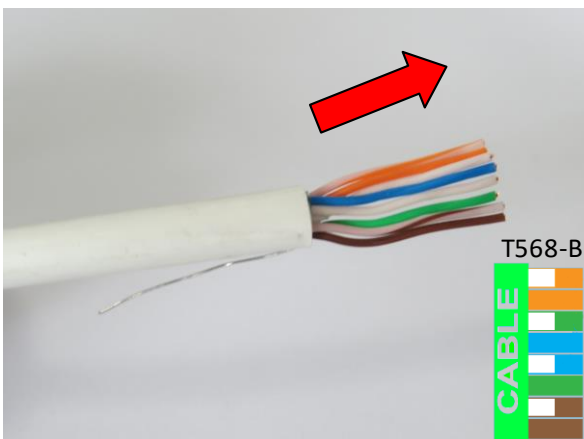

5. Untwist and arrange the wires in order according to T568A or B.  
Use plier to pull wires to make them straight.

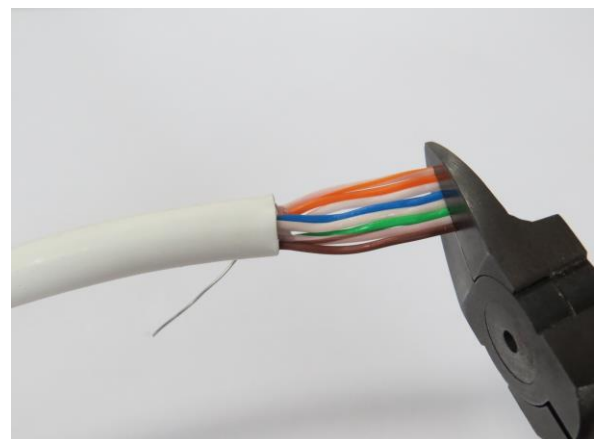


6. Trim the front end of the wires to make it easier to push into the load bar.




乾羅科技股份有限公司


*Plug Master Industrial Co.,Ltd.*

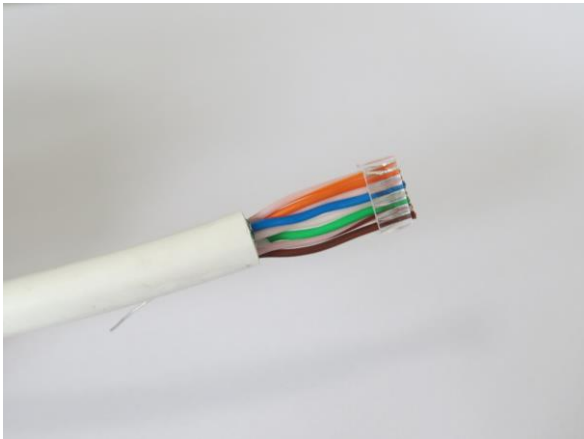


7. Slide wires into the load bar in order and put the load bar at the front end to easily push into wire guider of the plug body.

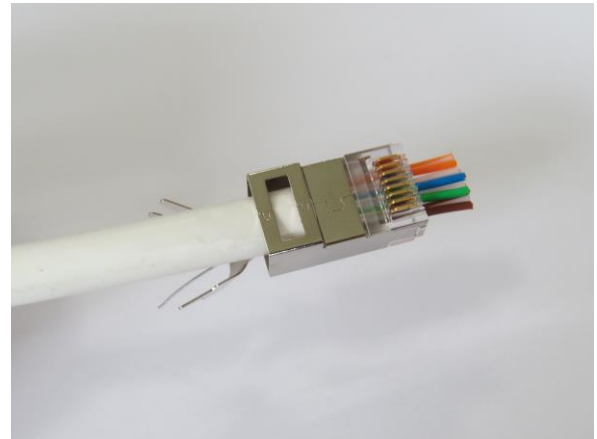


8. Push the cable into the plug body and put drain wire inside of the cable clip.

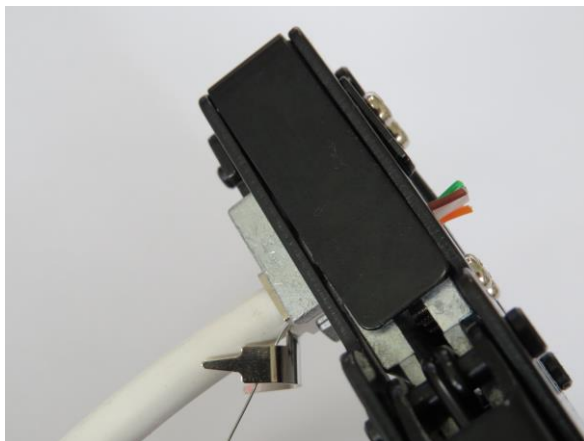


9. Use Tool PM-3008R to crimp the plug and cut the wires.

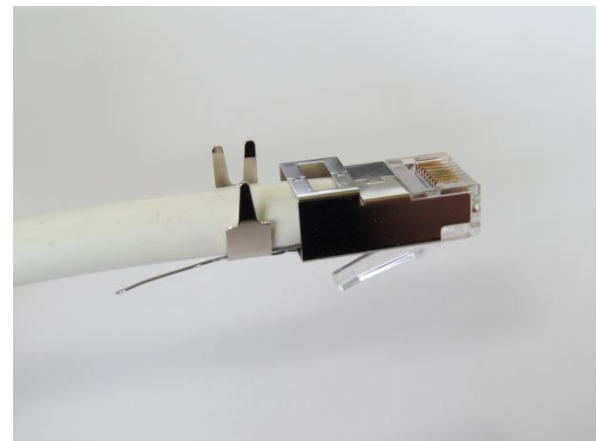

10. After Crimping, fold the cable clip upward parallel to the plug.

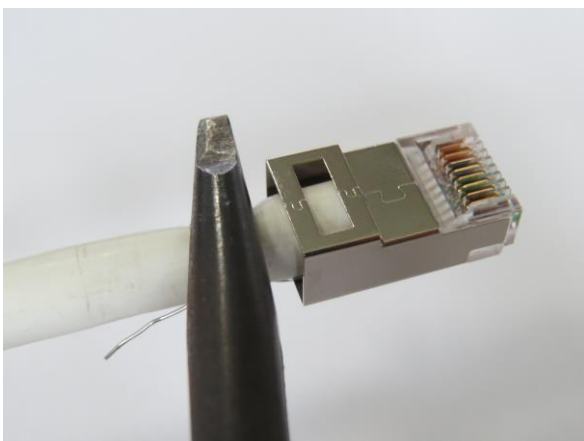

11. Use Plier to fix the cable clip round the cable closely.

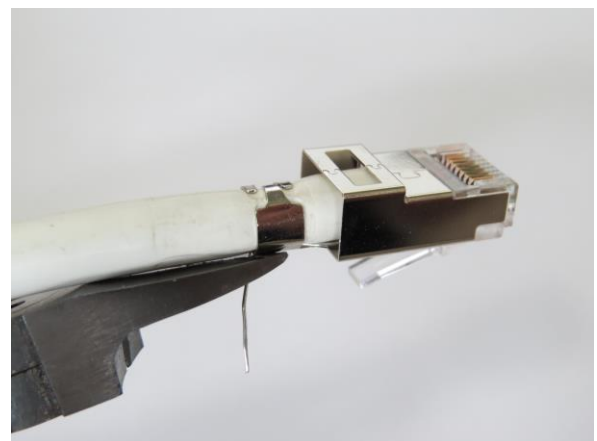


12. Cut the rest drain wire.




乾羅科技股份有限公司

*Plug Master Industrial Co.,Ltd.*

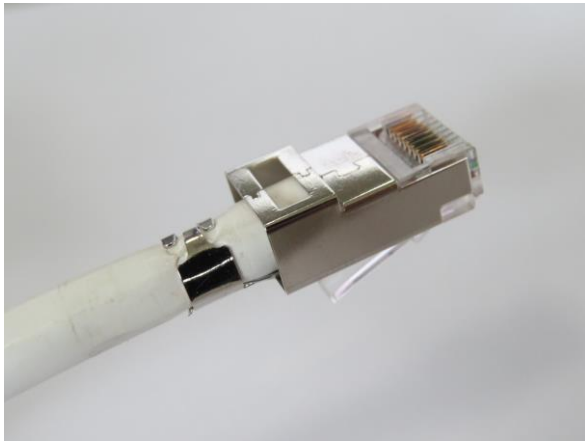

13. Assembling process completed.

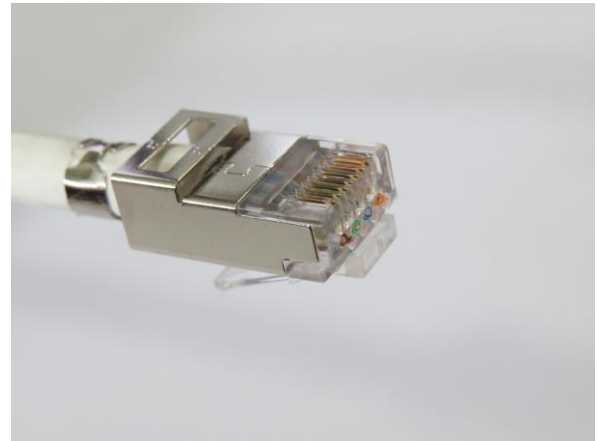

14. Assembling process completed.



Professional Crimping Tool for RJ-45 Fast plug Series