




乾羅科技股份有限公司
Plug Master Industrial Co.,Ltd.




1. P8-007-48 Cat.6 UTP

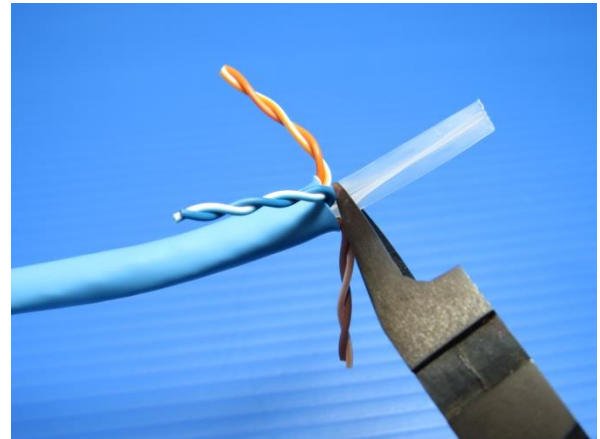


4. Trim cable cross member and separate four pairs.




2. EZ-TOOL # PM-3008R or # PM-3008RC
Carbon Steel and Chromium Plated

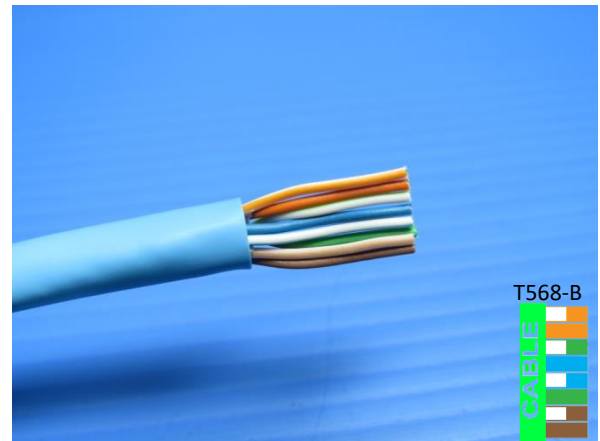

5. Arrange the wires according to TIA/EIA 568A & 568B standards.

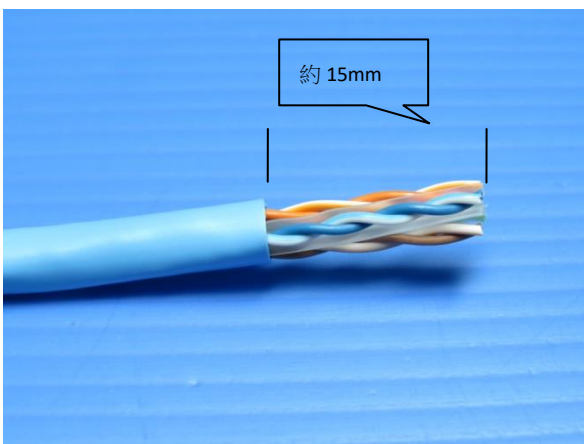


3. Strip and remove 15mm of jacket.

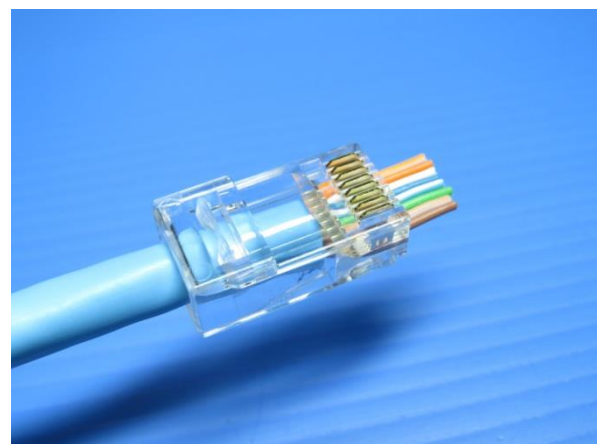


6. Push assembly into plug body.




乾羅科技股份有限公司
Plug Master Industrial Co.,Ltd.

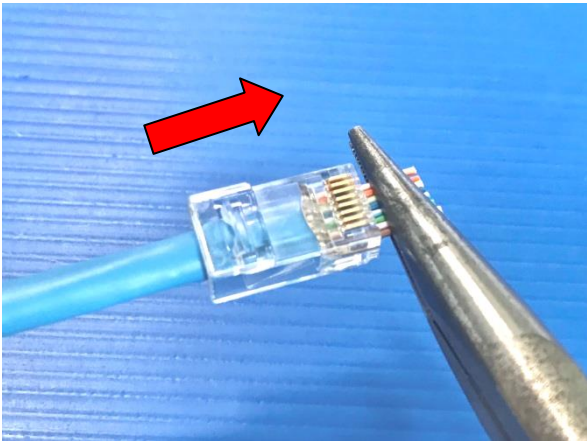


7. Use plier to pull wires to make them straight.

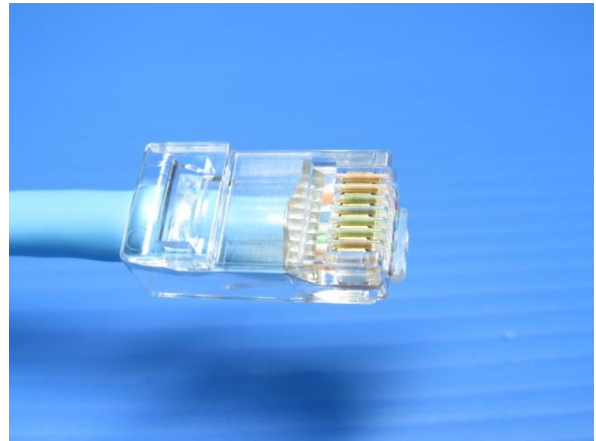

10. Assembly finished.

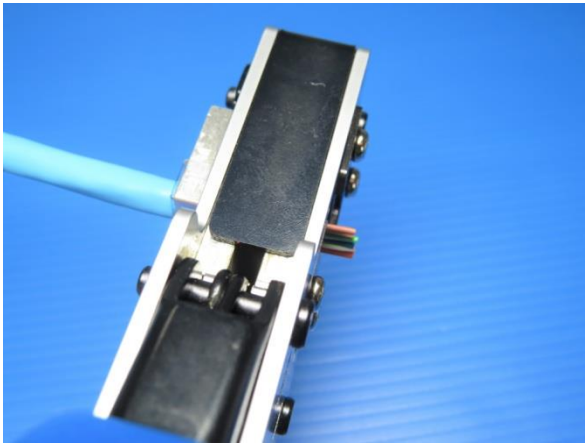

8. Put assembly into feed through tool

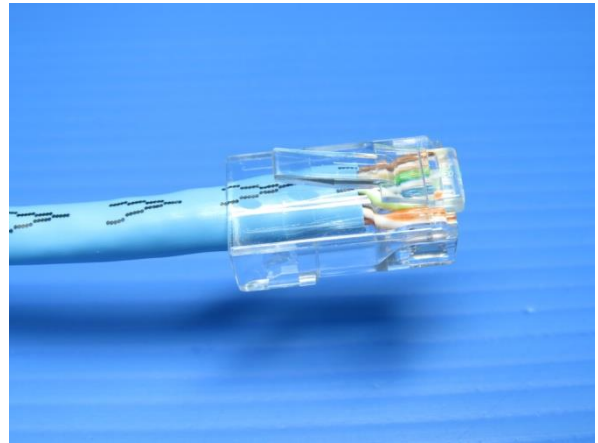

11. Assembly finished.



9. Crimp with Feed through Tool.