




乾羅科技股份有限公司
Plug Master Industrial Co.,Ltd.




1. P8-071-2 Cat.6A UTP

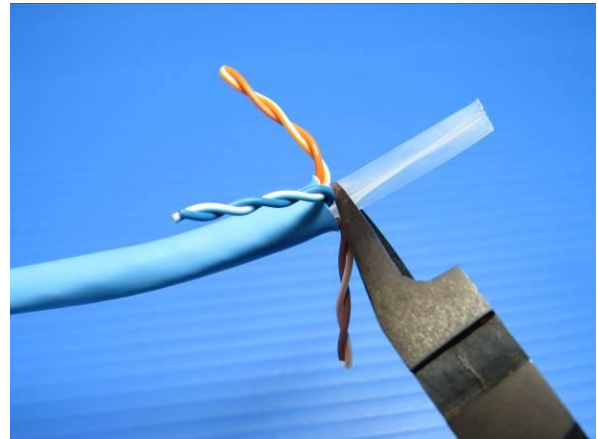


4. Trim cable cross member and separate four pairs.




2. EZ-TOOL # PM-3008R or # PM-3008RC

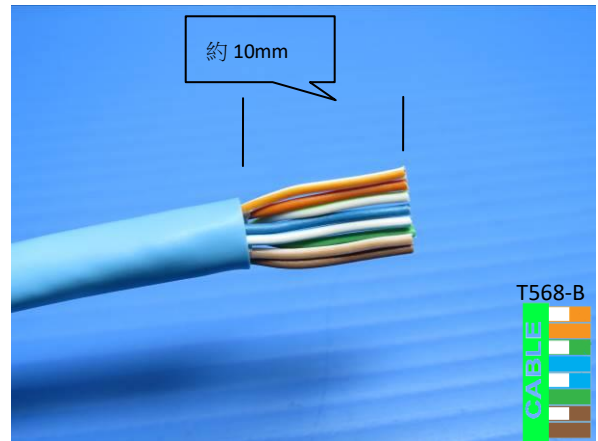

5. Arrange the wires according to TIA/EIA 568A & 568B standards.
10mm is most suitable length for assembly.

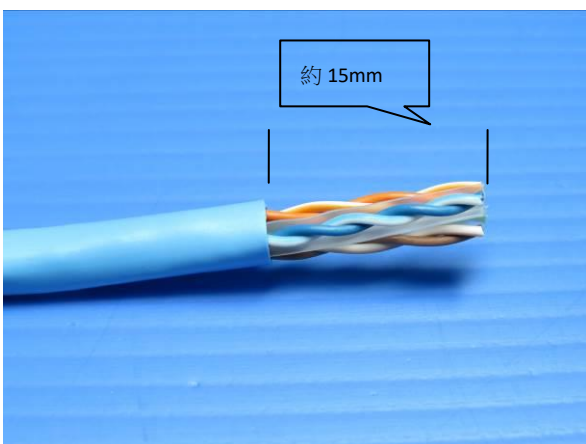


3. Strip and remove 15mm of jacket.

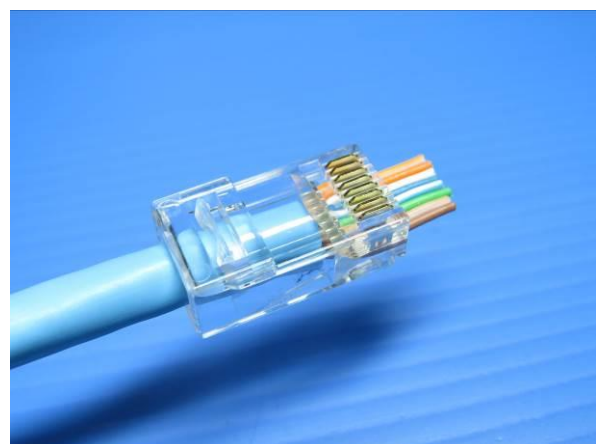

6. Push assembly in the end of plug.




乾羅科技股份有限公司
Plug Master Industrial Co.,Ltd.

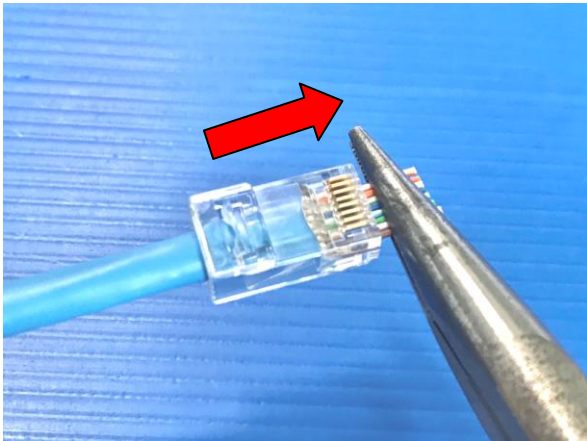


7. Use plier to pull wires to make them straight.



10. Assembly finished.

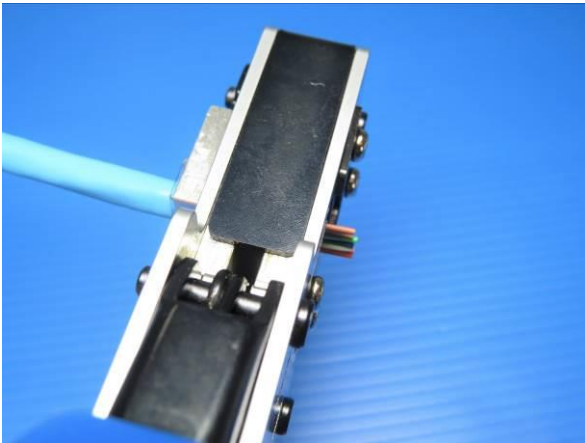

8. Put assembly into feed through tool

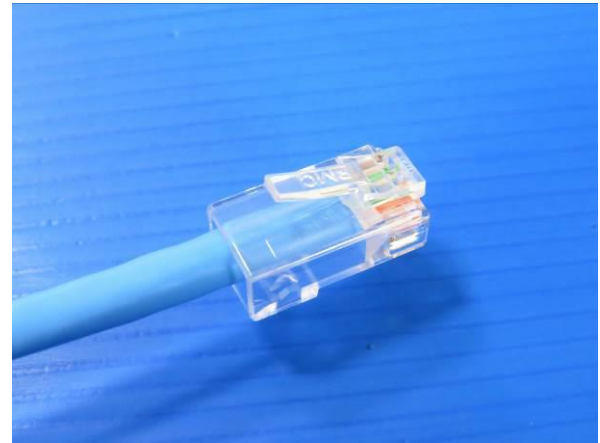

11. Assembly finished.



9. Crimp with Feed through Tool.